



W2 TUB INSTALLATION GUIDE

INDEX

Before you begin	p.1
Installation	
• W2 Freestanding Tubs	p.2
• Tools & Equipment	p.3
• Installation	p.3
• Cleaning Guide	p.6
• Warranty	p.7

BEFORE YOU BEGIN

Thank you for choosing from W2 by WETSTYLE's line of quality products.

Please note that prior to shipment from the manufacturing facility, the furniture you have received has passed quality control and was in excellent condition upon leaving the W2 by WETSTYLE facility.


We recommend that you carefully inspect the product prior to its installation. If there are any defects, please contact the dealer from whom you purchased the product and please DO NOT install the tub. W2 by WETSTYLE will not be held responsible for any defects or damage discovered once the furniture is installed.

It is highly recommended that a professional undertake the installation of the tub.


Please read this guide carefully to ensure the proper installation and reliability of your product for many years to come.

For assistance, please call customer service at 1.888.536.9001.


W2 Freestanding Tubs

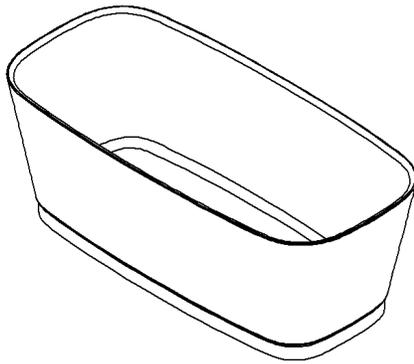


STRAIGHT

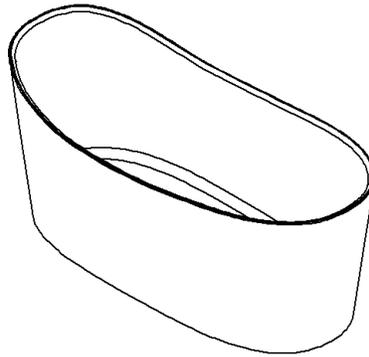

WAVE

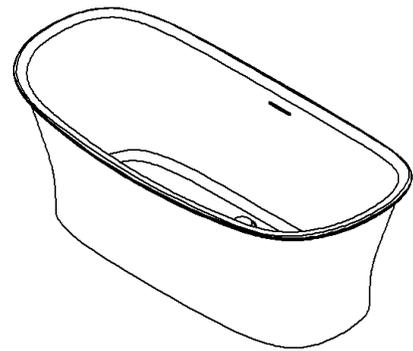

CLOUD

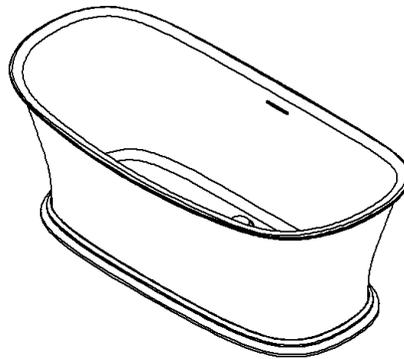

CLOUD with BASE



- W2 by WETSTYLE bathtubs are made of soy-based resin and mineral stone. Depending on the model, the tub's weight may vary between 56 & 67 Kilos (122 & 148 pounds). We recommend that the installation be done by 2 people as a security precaution. Also, make sure to adopt a proper posture when lifting the tub.
- Adhere to all local building and plumbing codes.

TOOLS AND EQUIPMENT



Protective glasses



Measuring tape



Paper pencil



Level



INSTALLATION GUIDE

1. Decide exactly where you wish to install the bathtub.
2. Install the basic plumbing components: water inlet and floor drain. Carefully centering connections to center of tub drain.


CAUTION

Drains are positioned lower than the base.



As to avoid damaging the pipes, plan for the necessary free space underneath the floor before installing the bathtub.

Models
Wave, Straight, Cloud

ABS vertical waste fitting

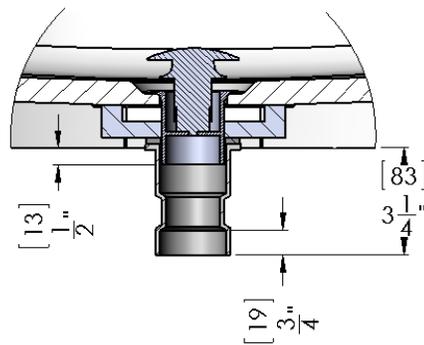


Brass vertical waste fitting

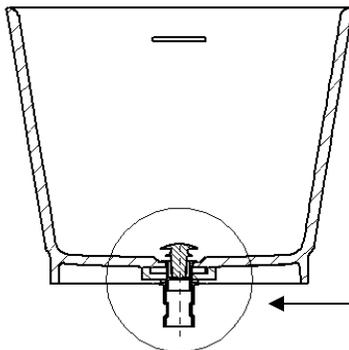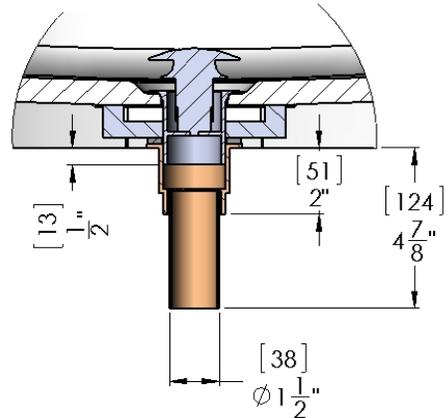

Vertical waste fitting


Model
Cloud with base

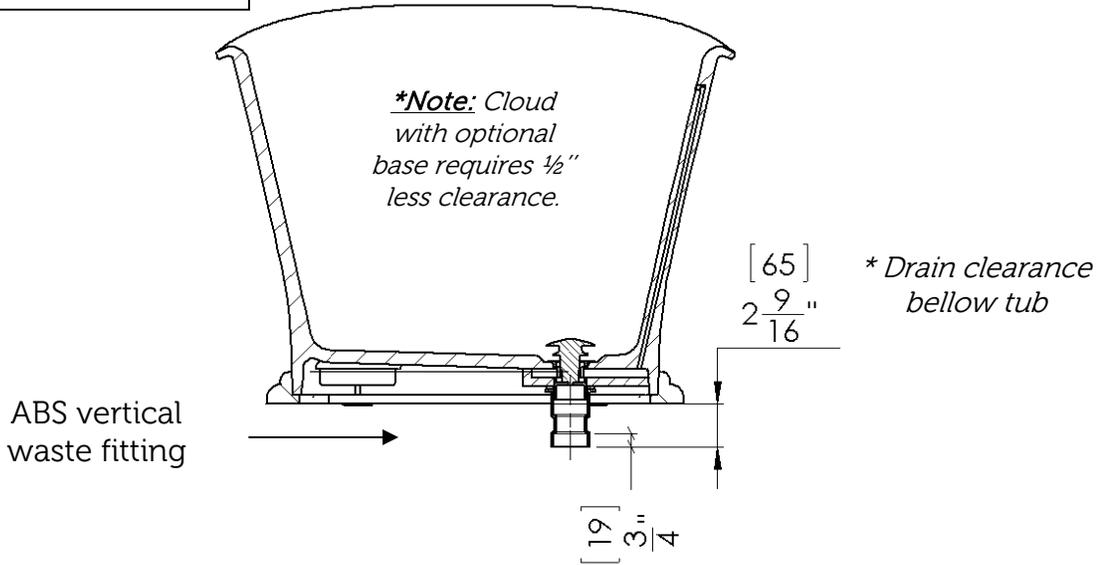


*** These tub models require vertical plumbing connection from the floor.

- Use the 4 levelers supplied to ensure the tub is level. The 4 levelers must touch the ground to ensure that the tub will not shift or move. When adjusting the levelers, allow a slight clearance (1/8") between the finished floor and the apron.


***NOTE:** Use a level to ensure accuracy.

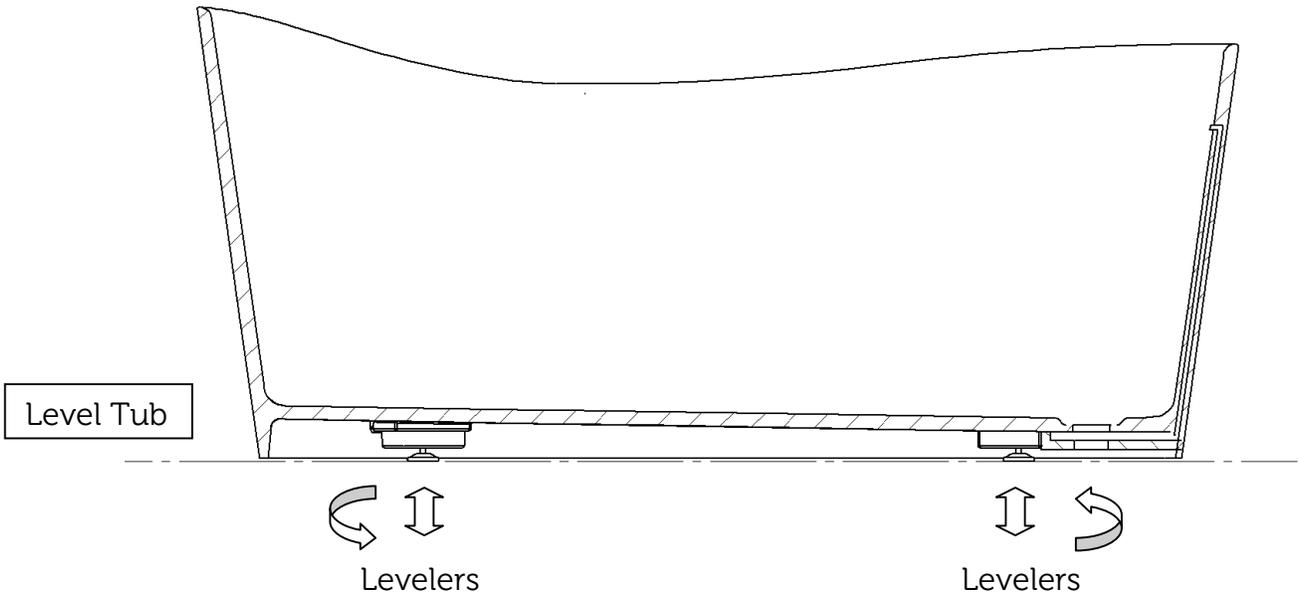

4. Connect the bathtub drain to the floor drain. Hook up the water to the faucet. **Check that all connections are waterproof.**

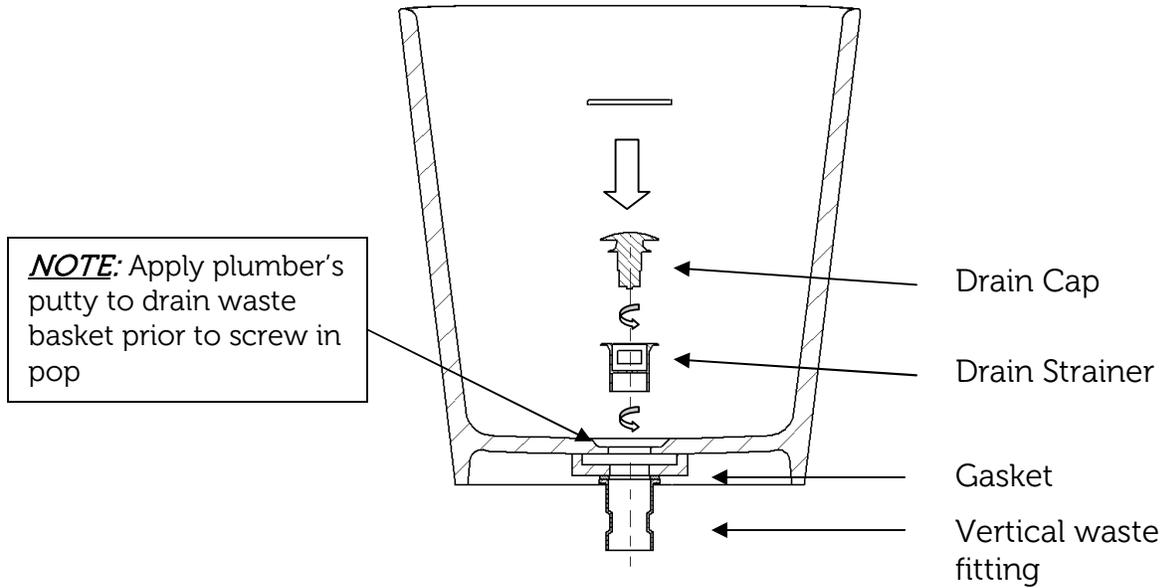

5. Do a silicone joint pressure seal between the base of the bathtub and the floor. The sealer absolutely must penetrate thoroughly beneath the rim of the apron. This will ensure that no water seeps underneath the bathtub, also supporting the tub apron.

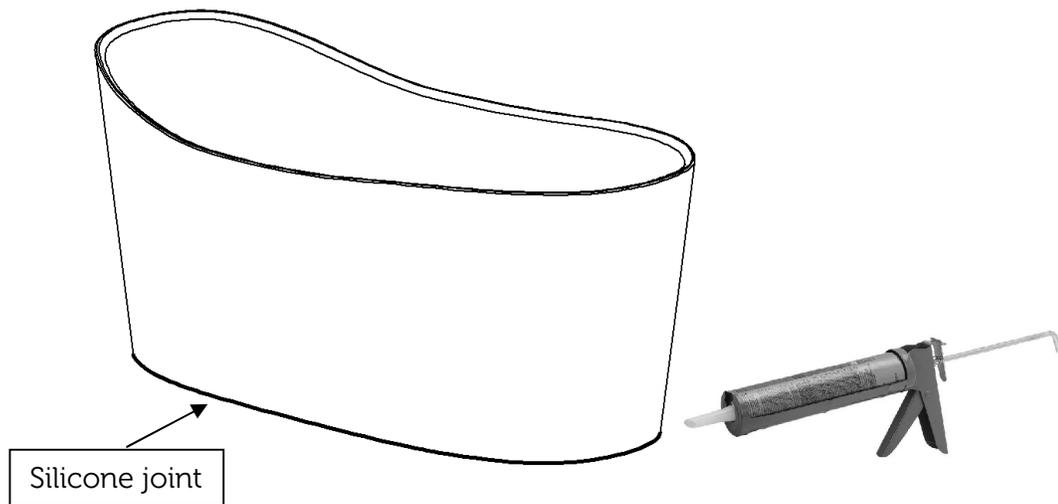

CLEANING GUIDE

All W2 bathtubs are made of WETMAR BiO™, an ultra-smooth, non-porous material which resists staining and calcification.

WETMAR BiO™ makes maintenance easy: simply wiping with a soft cloth after each use will make stains disappear.

For routine maintenance, we recommend household products such as Mr. Clean, Fantastik, CIF, etc. The matte finish is a slightly frosted surface which may require a more abrasive product.

Never use products (other than hygiene products and cosmetics) which contain petroleum distillates, such as paint thinners or other solvents. They may damage the WETMAR BiO™.

Routine maintenance

WETMAR BiO™, glossy finish

Wipe surface with a soft cloth after each use.

Use a mild cleaning product such as Mr. Clean, Fantastik, CIF, etc.

Do not use abrasive products or cream cleansers.

WETMAR BiO™, matte finish

Wipe surface with a soft cloth after each use.

Use a mild cleaning product such as Mr. Clean, Fantastik, CIF, etc.

For more difficult stains, use a mildly abrasive cream cleanser such as Soft Scrub, Comet Soft Cleanser, Cream with Bleach or CIF.

Scratched or damaged surfaces

To repair scratched or damaged surfaces, sand with 600-, 800- and 1200- grain paper, in order, starting with the smallest number. Finish by polishing with a cloth and a white automotive rubbing compound.

Repairs

For major repairs, send a photo of your WETSTYLE product to our customer service (service@WETSTYLE.ca). We will suggest the most appropriate repair method.

WARRANTY

W2 by WETSTYLE's warranty on **WETMAR Bio™** products covers all defects in materials and manufacturing for a period of five years.

This limited warranty, starting on the original purchase date, is only offered to the original purchaser who acquires the product directly from W2 by WETSTYLE or from its authorized dealers.

This limited warranty does not apply to cases in which a product was incorrectly installed, nor to damage due to negligence, misuse, thermal shocks, cigarettes, flames, natural catastrophes or other accidents.

This limited warranty does not extend to products purchased from unauthorized W2 by WETSTYLE distributors or sub-dealers.

W2 by WETSTYLE is not responsible for costs and claims that may arise from purchase of a product unsuited to the structure of the existing building.

Any transformation or alteration made to a W2 by WETSTYLE product automatically voids the warranty.

The manufacturer's warranty is limited to repair or replacement (with a product of equal value), provided the claim is made to an authorized dealer or directly to W2 by WESTYLE within the warranty period. All labour costs and any other expenses entailed by replacement of a W2 by WETSTYLE product are not covered by the warranty.

W2 by WETSTYLE products are certified CSA B45.0, CSA B45.4, ANSI Z1 24.1 and ANSI A124.3

Printed in Canada



www.WETSTYLE.CA/W2 – Montreal – Canada
Tel. 450.536.9000 – 1.888.536.9001 – Fax. 450.536.0202